

➔ FUSERBLOC - Références

fuser\_539\_a\_1\_cat



## NFC et DIN - Commande directe de 25 à 125 A

Calibre (A) / Fusible / Taille du boîtier	Nb pôles	Appareil nu	Poignée directe	Contact auxiliaire	Cache-bornes	Contact auxiliaire fusion fusible				
<b>CD 25 A / 10 x 38 / 0</b>	3 P	3631 <b>3002</b>	Noire 3629 <b>4012</b> <sup>(1)(2)</sup>	Type A 1 contact OF 3999 <b>0001</b> <sup>(3)</sup> Type A 2 contacts OF 3999 <b>0002</b> <sup>(3)</sup>	2 / 3 / 4 P intégrés	1 <sup>er</sup> contact OF 3994 <b>0303</b>				
	3 P + NC	3631 <b>4002</b>								
	3 P + NP	3631 <b>5002</b>								
<b>CD 32 A / 10 x 38 / 0</b>	3 P	3631 <b>3003</b>								
	3 P + NC	3631 <b>4003</b>								
	3 P + NP	3631 <b>5003</b>								
<b>CD 32 A / 14 x 51 / 0</b>	3 P	3631 <b>3004</b>								
	3 P + NC	3631 <b>4004</b>								
	3 P + NP	3631 <b>5004</b>								
<b>50 A / 14 x 51 / 1</b>	2 P	3615 <b>2005</b>					Noire 3629 <b>7900</b> <sup>(5)(2)</sup>	Type A 1 contact OF 3999 <b>0021</b> <sup>(3)</sup> Type A 2 contacts OF 3999 <b>0022</b> <sup>(3)</sup>	2 P 3998 <b>2016</b> <sup>(4)</sup> 3 P 3998 <b>3016</b> <sup>(4)</sup> 4 P 3998 <b>4016</b> <sup>(4)</sup>	1 <sup>er</sup> contact OF 3994 <b>0405</b> 2 <sup>e</sup> contact OF 3994 <b>1901</b>
	3 P	3615 <b>3005</b>								
	4 P	3615 <b>6005</b>								
<b>63 A / 00C / 2</b>	2 P	3615 <b>2006</b>								
	3 P	3615 <b>3006</b>								
	4 P	3615 <b>6006</b>								
<b>100 A / 22 x 58 / 3</b>	2 P	3615 <b>2010</b>								
	3 P	3615 <b>3010</b>								
	4 P	3615 <b>6010</b>								
<b>125 A / 22 x 58 / 3</b>	2 P	3615 <b>2011</b>								
	3 P	3615 <b>3011</b>								
	4 P	3615 <b>6011</b>								
<b>125 A / 00 / 3</b>	2 P	3615 <b>2012</b>								
	3 P	3615 <b>3012</b>								
	4 P	3615 <b>6012</b>								

(1) Commande frontale directe.  
 (2) Standard.  
 (3) Maximum 2 contacts.  
 (4) Amont ou aval.  
 (5) Commande latérale droite directe.