

fuser_230_a_1_cat



NFC et DIN - Commande directe de 160 à 400 A

Calibre (A) / Fusible / Taille du boîtier	Nb pôles	Appareil nu	Poignée directe	Contact auxiliaire	Cache-bornes	Contact auxiliaire fusion fusible
160 A / 00 / 3	2 P	3615 2015	Noire 3629 7901 ⁽⁴⁾⁽¹⁾		2 P 3998 2016 ⁽³⁾ 3 P 3998 3016 ⁽³⁾ 4 P 3998 4016 ⁽³⁾	
	3 P	3615 3015				
	4 P	3615 6015				
160 A / 0 / 4	2 P	3615 2016		Type A 1 contact OF 3999 0021 ⁽²⁾ Type A 2 contacts OF 3999 0022 ⁽²⁾	1 ^{er} contact OF 2 P 3994 0225 1 ^{er} contact OF 3 P 3994 0325 1 ^{er} contact OF 4 P 3994 0425	3994 0216
	3 P	3615 3016				3994 0316
	4 P	3615 6016				3994 0416
250 A / 1 / 5	2 P	3615 2024	Noire 3629 7901 ⁽⁴⁾⁽¹⁾		1 ^{er} contact OF 2 P 3994 0225 1 ^{er} contact OF 3 P 3994 0325 1 ^{er} contact OF 4 P 3994 0425	1 ^{er} contact OF 2 P 3994 0225
	3 P	3615 3024				1 ^{er} contact OF 3 P 3994 0325
	4 P	3615 6024				1 ^{er} contact OF 4 P 3994 0425
400 A / 2 / 6	2 P	3615 2039			1 ^{er} contact OF 2 P 3994 0225 1 ^{er} contact OF 3 P 3994 0325 1 ^{er} contact OF 4 P 3994 0425	1 ^{er} contact OF 2 P 3994 0225
	3 P	3615 3039				1 ^{er} contact OF 3 P 3994 0325
	4 P	3615 6039				1 ^{er} contact OF 4 P 3994 0425

(1) Standard.
(2) Maximum 2 contacts.

(3) Amont ou aval.
(4) Commande latérale droite directe.

fuser_416_a_1_cat



NFC et DIN - Commande directe de 630 à 1250 A

Calibre (A) / Fusible / Taille du boîtier	Nb pôles	Appareil nu	Poignée directe	Contact auxiliaire	Cache-bornes	Contact auxiliaire fusion fusible
630 A / 3 / 17	2 P	3811 2063	Noire 3899 6011 ⁽¹⁾⁽²⁾		2 P 3898 2080 ⁽³⁾ 3 P 3898 3080 ⁽³⁾ 4 P 3898 4080 ⁽³⁾	1 ^{er} contact OF 2 P 3894 1206
	3 P	3811 3063				1 ^{er} contact OF 3 P 3894 1306
	4 P	3811 6063				1 ^{er} contact OF 4 P 3894 1406
800 A / 3 / 17	2 P	3811 2080		Type U 1 contact F 3999 0701 ⁽⁴⁾ 1 contact O 3999 0702 ⁽⁴⁾	2 P 3898 2120 ⁽³⁾ 3 P 3898 3120 ⁽³⁾ 4 P 3898 4120 ⁽³⁾	
	3 P	3811 3080				1 ^{er} contact OF 2 P 3894 1212
	4 P	3811 6080				1 ^{er} contact OF 3 P 3894 1312
800 A / 4 / 18	2 P	3811 2081	Noire 3899 7011 ⁽¹⁾⁽²⁾		2 P 3898 2120 ⁽³⁾ 3 P 3898 3120 ⁽³⁾ 4 P 3898 4120 ⁽³⁾	1 ^{er} contact OF 2 P 3894 1212
	3 P	3811 3081				1 ^{er} contact OF 3 P 3894 1312
	4 P	3811 6081				1 ^{er} contact OF 4 P 3894 1412
1250 A / 4 / 18	2 P	3811 2120			2 P 3898 2120 ⁽³⁾ 3 P 3898 3120 ⁽³⁾ 4 P 3898 4120 ⁽³⁾	1 ^{er} contact OF 2 P 3894 1212
	3 P	3811 3120				1 ^{er} contact OF 3 P 3894 1312
	4 P	3811 6120				1 ^{er} contact OF 4 P 3894 1412

(1) Commande frontale directe.
(2) Standard.

(3) Amont ou aval.
(4) Maximum 8 contacts.